

Model P-55U Pressurized Suction Pumps Operating Instructions

Pressurized Suction Pumps

- Install pump in lubricator reservoir.
- Loosen union nut on pump outlet and fill pump with oil and prime by manually pumping flushing unit until air free oil is observed around union nut. It may be necessary to install manual hand priming gun in inlet to expel the air from pump. After this is accomplished tighten union nut.

Flow Rate


- Loosen lock nut on flushing unit.
- Turn flushing unit counter clockwise to increase flow.
- Turn flushing unit clockwise to decrease flow.
- Tighten lock nut when desired flow rate is achieved.

For Additional Information Contact:

Fred C. Gilbert Company

106 Norris Road
Bakersfield, Ca. 93308 USA
Telephone (661) 399-9569
Fax (661) 393-9654

Pump No. 91206

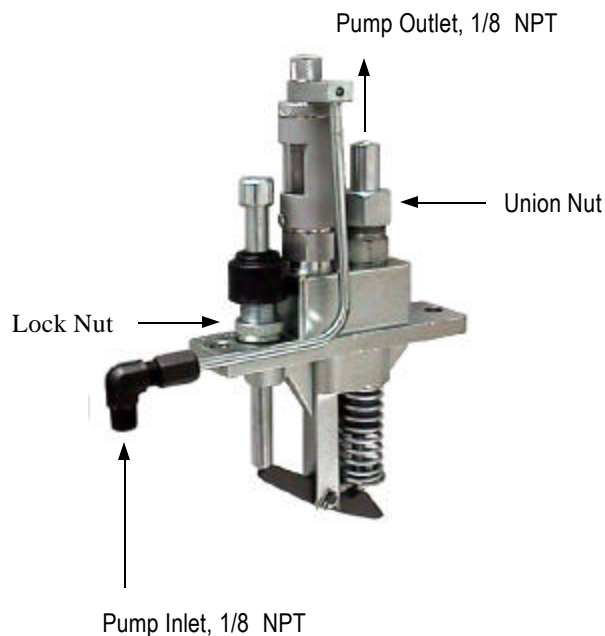

Pump No. 91490

