


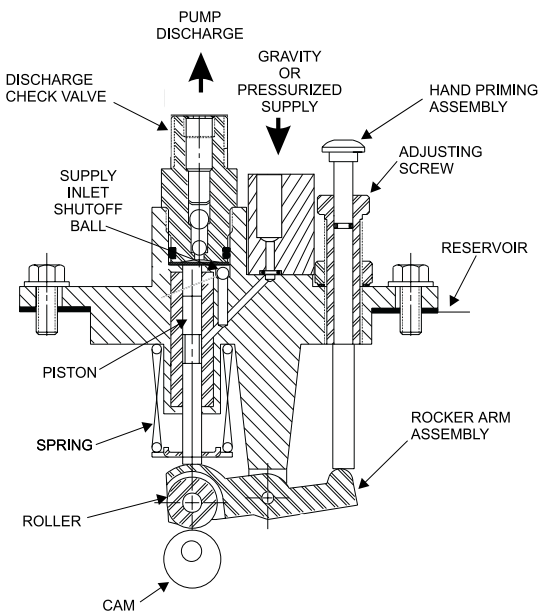

### Pumps With Gravity Feed and Pressurized Supplies

Rotation of the lubricator cam actuates the pump rocker arm assembly to operate the pump piston. On the piston downstroke, spring force is exerted on the piston causing it to follow the cam. As it moves down, a pressure reduction is created in the area between the piston and the discharge check valve. The gravity feed or pressurized supply unseats the supply inlet shutoff ball and fills the piston bore with lubricant. On the piston upstroke, the oil in the piston cylinder reseats the inlet shutoff ball and is forced out through the discharge check valve to the machine injection point. Pump volume can be adjusted by means of an external screw. This changes the length of the piston stroke which changes the pump discharge volume.



### ADJUSTMENT

Pump discharge (output flow) can be adjusted within the min./max. ranges as shown in the illustration. The adjustment is linear. Therefore, positioning the screw midway will produce one-half of the pump capacity. To adjust the flow, proceed as follows:

1. Loosen adjusting screw locknut.
2. Turn the adjusting screw to the desired position and, with the pump operating, count the drops falling in the sight well for a one-minute interval.
3. Tighten adjusting screw locknut.

### Calculate Pints Per Day As Follows:

$$\frac{\text{Number of Drops/Min.} \times 1440 \text{ (Minutes in a Day)}}{14115 \text{ (Number of drops in a Pint)}} = \text{Pints/Day}$$

### Calculate Minimum or Maximum Pump Output Capacity

$$\frac{\text{Input Speed} \times \text{Pump Output} \times 1440}{\text{Gear Ratio} \times \text{(Min. or Max. drops/stroke*)} \times \text{(Min./day)}} = \text{Min. or Max. Pump Output (Pints Per Day)}$$


\* Minimum and Maximum Drops Per Stroke Listed in Specifications on the next page.

**NOTE:** For proper sizing select the appropriate lubricator brand. Brand as well as piston size will effect minimum and maximum pump capacity.

The following example is a Manzel lubricator, electric motor driven, 300:1 internal ratio, 1/4" pump model 88. Solve for maximum flow:

$$\frac{1725 \text{ Motor Speed} \times \text{Max. 12 drops} \times 1440 \text{ Min.}}{300:1 \text{ Gear Ratio} \times \text{per stroke} \times 14115 \text{ (Number of Drops in a Pint)}} = \text{Max. 7.04 Pints/day}$$

To Calculate Minimum: Replace the maximum 12 drops per stroke with the minimum 2 drops per stroke: (1.17 minimum pints per day)

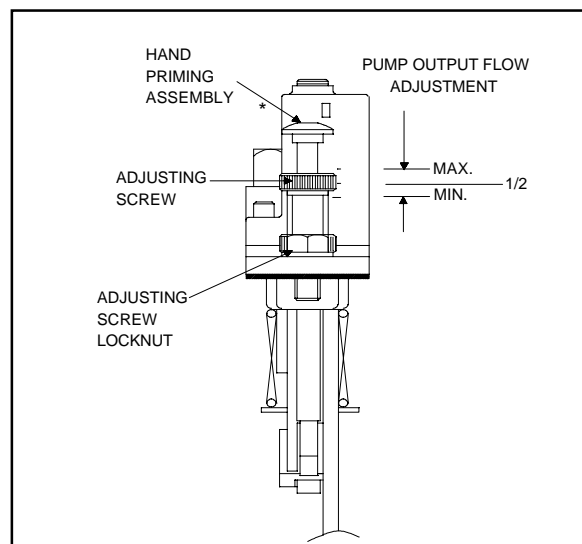

\*Should not reciprocate up and down as pump operates, on pumps built beginning in January 1997.

**SPECIFICATIONS**

PUMP SPECIFICATIONS												
PUMP MODEL <sup>4</sup>	PISTON DIAMETER (INCHES)	MAXIMUM PRESSURE <sup>3</sup> (PSI)	DROPS PER STROKE <sup>1&amp;2</sup>		CUBIC INCHES PER STROKE		CUBIC CENTIMETERS PER STROKE		STROKES PER MINUTE		STROKE LENGTH	
			MAX.	MIN.	MAX.	MIN.	MAX.	MIN.	MAX.	MIN.		
IN MANZEL LUBRICATOR (55 and 76)	88B,F,J 88C,G,K 88E,H,L	3/16 1/4 3/8	7500 PSI 6000 PSI 2500 PSI	6 12 27	1 2 4	0.013 0.024 0.055	0.002 0.004 0.008	0.213 0.393 0.901	0.033 0.066 0.131	50 50 50	3 3 3	1/2"
IN MEGA, LINCOLN OR PREMIER LUBRICATORS	88B,F,J 88C,G,K 88E,H,L	3/16 1/4 3/8	7500 PSI 6000 PSI 2500 PSI	5 9 20	1 2 4	0.009 0.018 0.041	0.002 0.004 0.008	0.148 0.295 0.672	0.033 0.066 0.131	50 50 50	3 3 3	3/8"

- 1 Based on 500 SUS oil at 70°F ambient. Heavier oil will produce fewer but larger drops.
  - 2 When approaching maximum outputs, some oils will stream rather than form drops in sight glass.
  - 3 For operating pressures over 50% of the rated maximum, consult the factory.
  - 4 Allowable viscosity range independent of temperature: 80-5000 SUS.
  - 5 Maximum allowable inlet pressure: Pressurized pump, 100 PSI; Pressurized pump with sight glass, 10 PSI.
- NOTE:** Any static positive pressure applied to the pump inlet has the potential to cause leakage flow through a pump at rest or adjusted for zero stroke unless offset by a check valve of comparable pressure rating located at the pump outlet. The "discharge check valve" pictured has no spring and is rated at zero PSI. The "outlet check valve" pictured in phantom in view at bottom of next page is rated at 35 PSI.

**ORDERING INFORMATION**

PUMP PISTON SIZE	VACUUM FEED PUMP		GRAVITY FEED PUMP AND PRESSURIZED PUMP <sup>5</sup>		GRAVITY FEED PUMP WITH SIGHT GLASS <sup>5</sup>	
	Model No.	Part No.	Model No.	Part No.	Model No.	Part No.
3/16-Inch	88B	376-000-001	88F	376-000-121	88J	376-000-530
1/4-Inch	88C	376-000-011	88G	376-000-131	88K	376-000-540
3/8-Inch	88E	376-000-031	88H	376-000-151	88L	376-000-560

**MODEL 88 PUMPS PART NUMBER INTERCHANGE**

Model 88 Pumps are interchangeable with Mega, Lincoln and Premier Model 55 Pumps. Use the following table to determine the appropriate part number.

**Model 88 Pumps Configured for Mega, Lincoln and Premier Box Lubricator, and for Manzel Model "55" Lubricator**

Mega P/N	Premier P/N	Lincoln P/N	Pump Size	Description	Order Part No.
-	-	-	3/16	*Vacuum Pumps (B)	376-000-490
039315, 1/4	91200 / 91220	880187 / 880550	1/4	*Vacuum Pumps (C)	376-000-500
039308, 3/8	91201 / 91221	880330 / 880560	3/8	*Vacuum Pumps (E)	376-000-520
-	-	-	3/16	Press Supply (F)	376-000-121
039488, 1/4	91202	880453 / 880552	1/4	Press Supply (G)	376-000-131
039489, 3/8	91203	880454	3/8	Press Supply (H)	376-000-151
-	-	-	3/16	Press Supply w/Sight Glass (J)	376-000-530
-	-	-	1/4	Press Supply w/Sight Glass (K)	376-000-540
-	-	-	3/8	Press Supply w/Sight Glass (L)	376-000-560
-	-	-	3/16	Press Supply to Front	376-000-370
038704, 1/4	91208	880087-X	1/4	Press Supply to Front	376-000-380
038705, 3/8	91209	880402-X	3/8	Press Supply to Front	376-000-400
-	-	-	3/16	Press Supply to Rear	376-000-410
038702, 1/4	91206	880087-CL	1/4	Press Supply to Rear	376-000-420
038703, 3/8	91207	880402-CL	3/8	Press Supply to Rear	376-000-440
-	-	-	3/16	Press Supply w/Shutoff	376-000-450
039425, 1/4	91204	880087	1/4	Press Supply w/Shutoff	376-000-460
038153, 3/8	91205	880402	3/8	Press Supply w/Shutoff	376-000-480


\* When configured from the factory to fit into Manzel Model "55", Mega, Lincoln or Premier Box Lubricators, the vacuum pump has a .875" shortened suction tube.

Manzel Model 88 B, C and E pumps can be field modified to fit Mega, Lincoln and Premier Lubricators. Remove the strainer, break off the suction tube at the V-groove, and replace the strainer.

## MANZEL MODEL 88 PUMP OPERATING INSTRUCTIONS

1. Fill the box lubricator reservoir, to the top of the sight level gauge, with oil, filtered through a 25 micron nominal strainer. (Machine requirements may dictate a higher oil cleanliness level.)
2. Expel all air from the pump.  
**NOTE:** Do not connect the oil line to the pump outlet or lube point until all air has been expelled.  
 To Expel Air From The Pump:
  - a. Remove the sight well plug.
  - b. Fill the sight well to the top with filtered oil.
  - c. Operate the hand priming assembly until the oil level drops below the end of the drip tube.
  - d. Replace the sight well plug.
  - e. Continue to hand prime until oil from the drip tube is free of air.
  - f. If all oil is evacuated from sight well, repeat steps A through E as often as necessary, until all air has been expelled.
4. Connect the tubing to the pump outlet.
5. Hand prime the pump until clean, air-free oil is flowing through the lube line.
6. Connect the tubing to the lube point.
7. The lubricator is now ready to operate. After start-up, the lubricator may require adjustment of the individual pumps to meet required flow rates.
8. To adjust The Pump:
  - a. Loosen the adjusting screw lock nut.
  - b. Turn the adjusting screw clockwise or counterclockwise to decrease or increase flow.
  - c. With the lubricator operating, count the drops falling into the sight well for one minute.
  - d. If any further adjustment is necessary, turn the adjustment screw; 1) counterclockwise to increase flow (drops per minute); or 2) clockwise to decrease flow (drops per minute).
- e. Repeat (7-c) to assure that the pump is adjusted to the proper specification.
- f. Once the pump has been adjusted to the proper specification, tighten the adjusting screw locknut.
9. The recommended minimum flow rate is 2 drops per stroke. Operators are cautioned against decreasing the oil flow below this rate, as a pump malfunction may occur.
10. The minimum recommended strokes per minute is 3. The maximum recommended strokes per minute is 50.  
**NOTE:** To maximize pump life, it is recommended that the pump not exceed 20 strokes per minute.
11. Oil level in the sight well will stabilize promptly, then rise and fall slightly during pump operation.  
 Should oil level in the sight well rise above the drip tube:
  - a. Remove the sight well plug.
  - b. Allow the pump to continue to operate until the oil level has dropped below the drip tube.
  - c. Replace the sight well plug.  
**NOTE:** This condition is not uncommon for a vacuum type pump. However it could be an indication of a problem with the supply inlet shutoff ball/seat. If this condition persists, check the ball and seat. If there are no apparent problems there, the piston and bore are worn and the pump should be replaced.
 Should oil level in the sight well fall below the pump body surface:
  - a. Remove the sight well plug.
  - b. Allow the pump to continue to operate, and manually fill the sight well with filtered oil to below the end of the drip tube.
  - c. Replace the sight well plug.  
**NOTE:** This condition could be an indication of a problem with the seal between the sight glass and pump body surface, or with the sight well plug. Check parts for nicks, cuts and sealing capability. Replace parts using repair kit # 560-001-860 if needed.
12. The MANZEL MODEL 88 PUMP will operate in a Manzel, Mega, Lincoln, or Premier lubricator. For more information about the Manzel Force Feed Box Lubricator, refer to Bulletin 51020 and/or 51040.

## PUMP DIMENSIONS

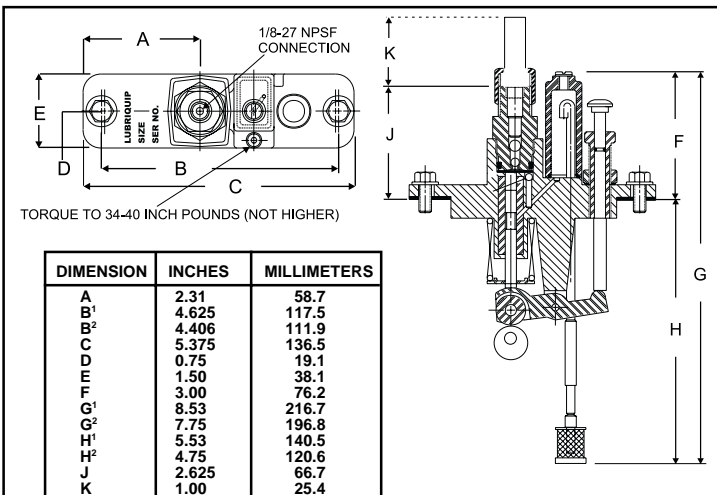

## PUMP REPAIR KITS

- Pump repair kits are the same for both vacuum feed and gravity feed with sight glass pumps in all pump sizes. Repair kits may be ordered by part number 560-001-860 and contain only parts necessary to replace the pump sight glass.
- Body/sleeve and piston subassembly is not sold separately.

### FLUID MEASUREMENT CONVERSION DATA

1 Drop	= Approx. .002 cu.in.
14,115 Drops	= 1 Pint
28.89 cu.in.	= 1 Pint
490 Drops	= 1 cu.in.
10 Drops/Minute	= 1 Pint/24 Hours
30 Drops	= 1cc

B1/G1/H1 - in Manzel "76" Lubricator; B2/G2/H2 - in Manzel "55" Mega, Lincoln and Premier Lubricator.

© Registered trademark of LUBRIQUIP, INC.,  
A Unit of IDEX Corporation, Printed in U.S.A.